

CRITICAL TORQUE™



QUICK START GUIDE

TABLE OF CONTENTS

FEATURES.....	3
GRIP OPTIONS.....	4
POWER ATTACHMENTS.....	5
BATTERY BASICS.....	6
DISPLAY LAYOUT.....	7
SETTINGS MENU.....	8
SETTINGS DEFINED.....	9
SESSION RUN MENU.....	10



VIDEO TUTORIAL
RECOMMENDED

FEATURES

1.5" COLOR DISPLAY
Upgraded V3 Battery

INDUSTRY FIRST
Precision Strike Technology

3.5 STROKE
Green Housing

4.2 STROKE
Black Housing

**VIBRATION
DAMPENING
SOLUTION**

DIMENSIONS

34mm (1.33") x 131mm (5.15")
37mm (max battery width)

OVERALL WEIGHT

6.2 oz (pen, battery, 34mm grip)



GRIP OPTIONS



*40mm grip not included in single set

POWER ATTACHMENTS

V3
BATTERY



RCA
ADAPTER





VIDEO TUTORIAL
RECOMMENDED

BATTERY BASICS

LARGE CAPACITY BATTERY

Up to 15 hours of tattooing *

L1
UP

L2
DOWN

R1
UP

R2
DOWN



HOME

POWER ON/OFF: 3 Second Hold

SELECT OR OUTPUT POWER : 1 Click

HOME STANDBY MODE: Double Click to Enter/Exit'

**USB-C
CHARGING
POINT**

* tattoo duration could change due to battery charge and voltage usage.

DISPLAY LAYOUT



CRITICAL CONNECT



Connected



Disconnected

JUMPSTART



Jumpstart Off



Jumpstart On

To change settings, go to Settings Menu (see next page)

PRESETS



Unselected



Selected

To save preset: Go to selected voltage and hold your secondary buttons (L1/L2 or R1/R2) for 3 seconds to save preset.

PEDAL MODE



Continuous



Momentary

To change settings, go to Settings Menu (see next page)

BATTERY LIFE



100%



80%



60%



40%



20%



0%

VOLTAGE



up



down

Use your primary buttons (L1/L2 or R1/R2) to navigate.

SESSION / RUN TIME

 
HOURS: MINUTES



SETTINGS MENU



(DEFAULT SETTINGS)

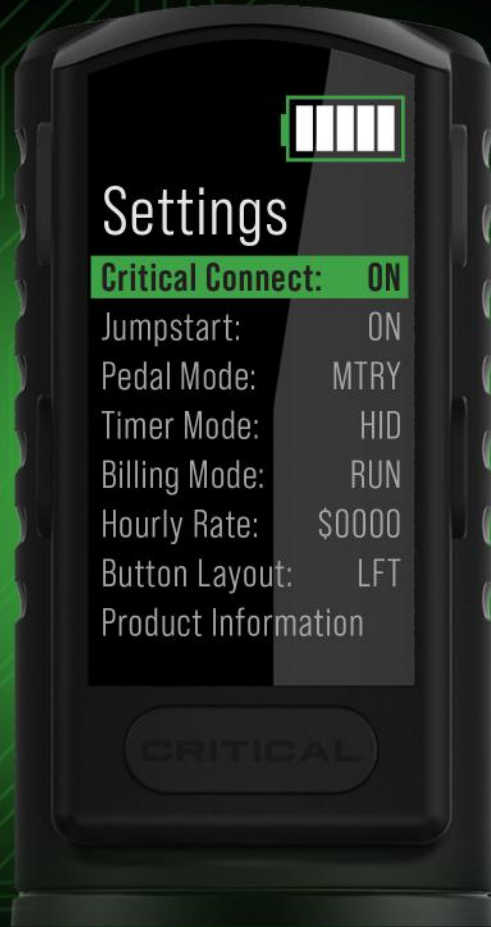

(ALTERNATE SETTINGS)

COMMAND	BUTTONS	ACTION
TO ENTER SETTINGS MENU FROM MAIN MENU	L1 + R1	3 SEC HOLD
SCROLL UP	L1 OR R1	1 - CLICK
SCROLL DOWN	L2 OR R2	
BACK BUTTON OR RETURN TO MAIN MENU	CRITICAL	2 - CLICK

SETTINGS DEFINED

CRITICAL CONNECT:

Connect or Disconnect from Bluetooth
(Critical Connect Footswitch Required)

JUMPSTART:

Turn Jumpstart On or Off

PEDAL MODE:

If using a footswitch, you can change your output mode on the pedal to either continuous or momentary power.

TIMER MODE:

You can make your Run/Session timer visible on the main menu or hide it with a play/pause symbol.

BILLING MODE:

 
If you want to track your session time and/or hourly rate, you can do so two ways. The Session timer will record the entire session from when you manually start the timer and pause it, like a stopwatch. The Run timer will record only when the battery is active and outputting power.

HOURLY RATE:


You can update your hourly charge rate here.

BUTTON LAYOUT:


You can switch your primary buttons to either the Left or Right side to change the voltages.

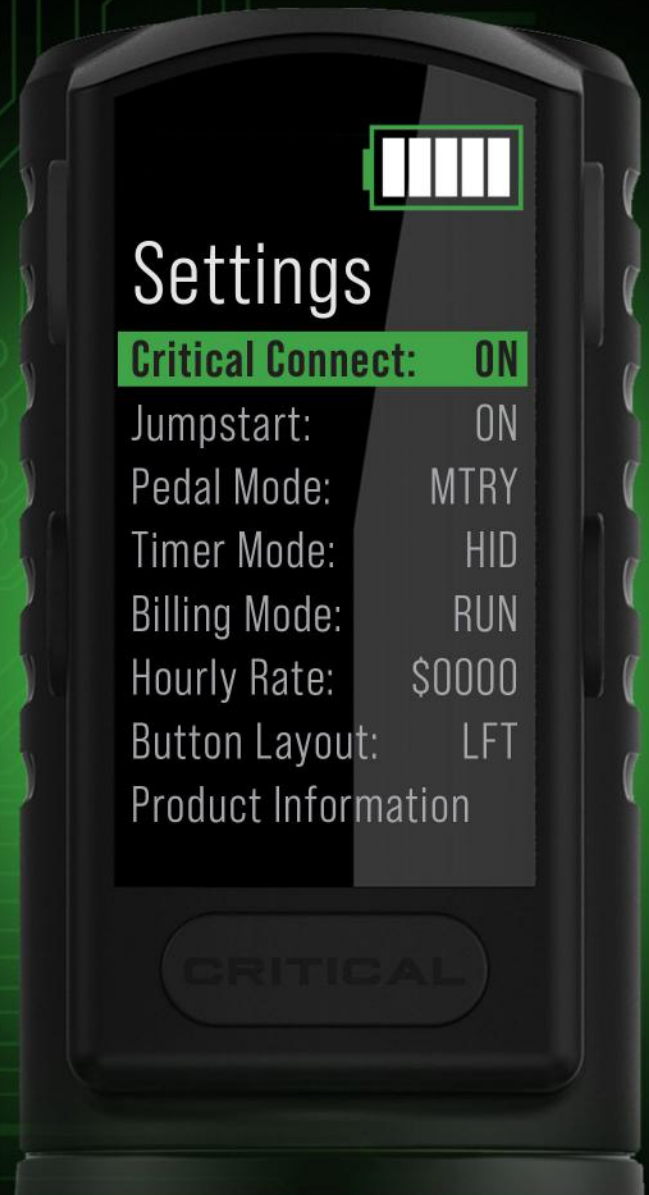

SESSION RUN MENU

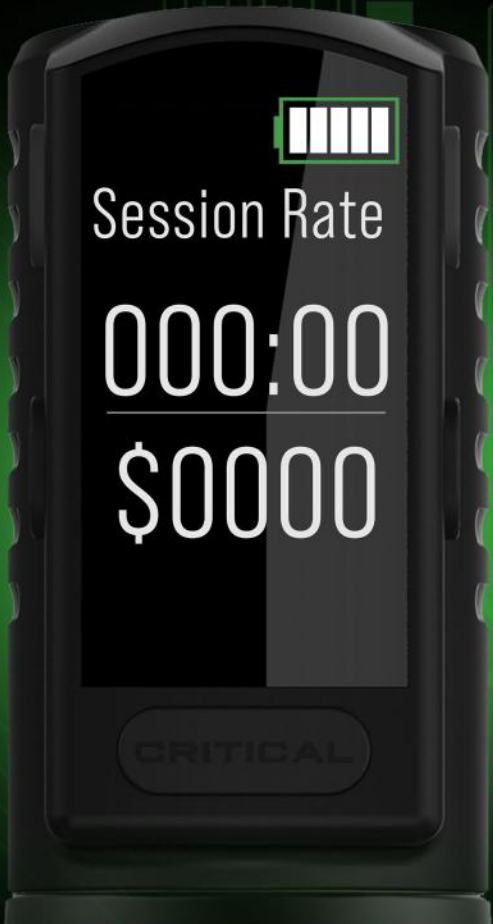 

 HOURS : MINUTES
 TIME X HOURLY RATE
 = SUM

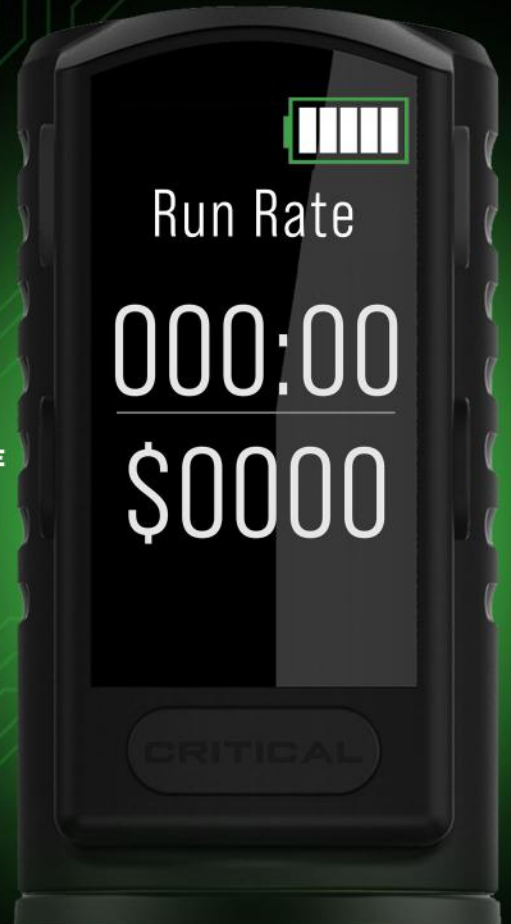

** Run Rate occurs when machine indicates the battery is outputting power.

COMMAND	BUTTONS	ACTION
TO START/PAUSE TIMER (SESSION MODE ONLY) - WHILE ON THE MAIN PAGE	(L2) + (R2)	1 - CLICK
TO ENTER 'SESSION/RUN MENU' FROM MAIN PAGE	(L2) + (R2)	3 SEC HOLD
TO CLEAR OR RESET THE TIMER - WHILE IN THE SESSION/RUN MENU	(L2) + (R2)	3 SEC HOLD
TO EXIT SESSION/RUN MENU TO RETURN TO MAIN PAGE	(CRITICAL)	2 - CLICK

POWER TO THE ARTIST®



CRITICAL®
TATTOO SUPPLY

WWW.CRITICALTATTOO.COM

  @CRITICALTATTOOSUPPLY

EMAIL: INFO@CRITICALTATTOO.COM

PHONE: 877-271-1446

DESIGNED IN CALIFORNIA | MADE IN CHINA

US PATENT 10471246, 202030724065.7, 29/736,884 AND OTHER US PATENTS PENDING
AU PATENT 201935961B AND OTHER AU PATENTS PENDING
CN PATENT 202030297770.3 AND OTHER CN PATENTS PENDING
EU PATENT 008363311-0002 AND OTHER EU PATENTS PENDING
CA PATENTS PENDING

